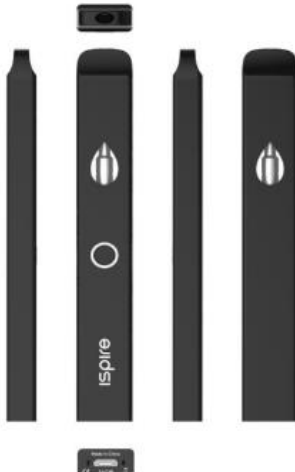


ISpire	DOCUMENT NO	XXB-DIS-5010	VER	1.0
	LVLv2 Close-top Preheat			EFFECTIVE DATE: 6/12/2023
CUSTOMER	/	MODEL NUMBER	5010	
				
Description	Top fill disposable			
Features	Food-grade stainless steel center-tube			
	Clog proof design			
	Visible oil chamber can check the remaining oil			
Specifications				
Version(Size)	2.0 ml			
Resistance	1.3Ω			
Fluid Inlet Diameter	φ1.3mm*2			
Wetted Material	Fluid housing	PCTG		
	Atomizer shell and airway tube	Stainless steel		
	Atomizer base	Silicon 55°		
	Heating element	FeCrAl		
	Wick	Ceramic		
	Atomizer retaining wrap	Cotton		
	Seals	Silicon 55°		
Note	Mouthpiece type	Jig-press, but can also be pressed by hand		

ISpire	DOCUMENT NO	XXB-DIS-5010	VER	1.0
	LVLv2 Close-top Preheat			EFFECTIVE DATE: 6/12/2023
CUSTOMER	/	MODEL NUMBER	5010	
Electrical Specifications		User Interface		
Battery Cell Capacity	320mAh	Charging indication	When charging, the LED will be on. Flash out when the cell is fully charged. LED flash 3 times when plugged out.	
Output Voltage	3.3V	Activation	Button activated & Auto-draw after turn-on	
Max. Current Output	3A	Notification	LED	
Charging Current	0.5A	Low Battery Notification	LED flashes 15 times	
Device Operation				
Operations	Range or Description		Comments	
Power On/Off	Press button 5 times within 2 seconds, flashing 3 times.		N/A	
Power Level Indication	N/A			
Pre-heat function	Press fire button 2 times within 1 seconds. Pre-heat will take 10 seconds to be ready, flashing 5 times.		N/A	
Battery Level Indication	When charging, the LED will be on. Flash 20 times when the cell is fully charged. LED flash 3 times when plugged out.		N/A	

ISpire	DOCUMENT NO	XXB-DIS-5010	VER	1.0
	LVLv2 Close-top Preheat			EFFECTIVE DATE: 6/12/2023
CUSTOMER	/	MODEL NUMBER	5010	

Filling Instruction

1. Keep the disposable vertically oriented with the USB charging port pointing down, fill the disposable using a blunt tipped needle or a sharp tipped needle. Do not overfill.

2. Insert the needle into the fill hole located between the airway and the outer wall of the disposable (see figure below).

3. After filling, immediately insert and press the mouthpiece into the top of the disposable until fully seated.

Do not use a hammer or mallet to insert the mouthpiece. Once the mouthpiece is fully seated, it cannot be removed without damaging the disposable or mouthpiece.

Caution	<p>While filling, do not allow fluid to enter the airway at the center tube.</p> <p>Failure to install mouthpiece within 2 minutes after filling may result in leakage.</p> <p>Do not twist or rotate the mouthpiece while it is being inserted.</p>
----------------	--

